

## Charging the battery

# Operating Instructions

BlackBerry 7730 Wireless Handheld

Your voice number is:



O<sub>2</sub> English

### Using the travel adapter

 
1 Connect the larger end of the USB cable to your handheld.



2 Connect the smaller end of the USB cable to the power adapter.



3 Slide the appropriate attachment piece into the power adapter.



4 Plug the power adapter into a power outlet.

5 Let the battery charge to full power (approximately 3 to 4 hours).

Tip: To keep the battery at a full charge, recharge it for 10 to 15 minutes every day.

In the unlikely event that you experience a loss of either voice or e-mail service, please try removing the battery from the unit. Wait 10 seconds and replace the battery. It will take a few minutes to reboot and log back onto a network, please be patient during this time.

If this does not help, please contact Cellhire for assistance.



# Basic phone operation

## Answering phone calls

- 1 In the dialog box that appears when you receive a phone call, scroll to desired option and click the trackwheel.
- 2 To end the call, press and hold the **Escape** button

## Adjust the volume

- 1 During the call:
  - To increase the volume, roll the trackwheel up
  - To decrease the volume, roll the trackwheel down.

**Tip:** To adjust the volume while you are using another handheld application, click the trackwheel. A menu appears. Click **Volume**. Roll the trackwheel up or down to change the volume.

## Opening an application

- 1 On the home screen, click an icon. The application opens.

## Turn on / off backlighting

- 1 Press the **Power** button.

## Turn on the radio

- 1 On the Home screen, click the **Turn Wireless On** icon.



**Tip:** To turn off the radio, on the Home screen, click the **Wireless Off** icon

# Making phone calls

To make a phone call, the following requirements must be met:

- The wireless coverage indicator must show a level of wireless coverage.
- **GPRS**, **gprs** or **GSM** must appear with the wireless coverage indicator on the home screen.

## Making a phone call

**Note:** If you are using a headset, insert the headset connector into the headset jack at the top of the handheld.

- 1 Open the phone. The phone screen appears.
- 2 Press **Alt + Space**, then type the phone number.  
Always use the international format:  
+ then (country code) then (area code) then (phone number).
- 3 Press **Enter**. The phone number is dialed.
- 4 To end the call, press and hold the **Escape** button.

**Tip:** On the phone screen, press the **Space** key and press the **Enter** key to dial the last number that you typed.

## Call a contact in your address book

- 1 Open the address book. The find screen appears.
- 2 Type the first letters of a contact. Contacts that start with these letters will appear.
- 3 Click a contact. A menu appears.
- 4 Click **Call <contact name>**. The phone number is dialed.
- 5 To end the call, press and hold the **Escape** button.

# VoiceMail

## Call your VoiceMail

- 1 Open the phone. The phone screen appears.
- 2 Press **Alt + Space** then enter the + sign on your keypad followed by:  

---
- 3 Press **Enter**
- 4 Interrupt the personal greeting by pressing **\***.
- 5 When prompted, enter PIN code: **3333**.
- 6 At command code prompt, press **2** for message retrieval.
  - To save a message, press 2
  - To delete a message, press 3
- 7 To end the call, press and hold the **Escape** button.

Note: Please do not change the PIN code. You will be liable for an administration fee of £50/US\$75/€75/AU\$135 if the PIN code is changed.

# SMS messaging

## Send an SMS message

- 1 Open the message application. The messages screen appears.
- 2 Click the trackwheel. A menu appears.
- 3 Click **Compose SMS**. The select address screen appears.
- 4 Click **[Use Once]**. A menu appears.
- 5 Click **SMS**. The one time SMS screen appears.
- 6 Type your contact's SMS-compatible phone number.

Tip: When you type an SMS-compatible number, include the country code and the area code.

- 7 Click the trackwheel. A menu appears.
- 8 Click **Continue**.
- 9 Type a message.
- 10 Click the trackwheel. A menu appears.
- 11 Click **Send**. The message is sent.

If you send a message and you are not in an area of sufficient wireless coverage, the handheld sends the message when you return to an area of sufficient wireless coverage.

Charges will apply for SMS messaging.

# Managing the address book

## Create a contact

- 1 Open the address book application. The find screen appears.
- 2 Click the trackwheel. A menu appears.
- 3 Click **New Address**. The new address screen appears.
- 4 Type in contact information and click the trackwheel. A menu appears.
- 5 Click **Save**. The contact is saved.

## Add contact information from the messages screen

- 1 Open the messages application. The messages screen appears.
- 2 Click a message or phone call log. A menu appears.
- 3 Click **Open**. The message call log appears.
- 4 Click the trackwheel. A menu appears.
- 5 Click **Add To Address Book**. The new address screen appears.
- 6 Type contact information and click the trackwheel. A menu appears.
- 7 Click **Save**. The contact is saved.

## Edit a contact

- 1 Open the address book application. The find screen appears.
- 2 Click a contact. A menu appears.
- 3 Click **Edit**. The edit address screen appears.
- 4 Edit the contact information and click the trackwheel. A menu appears.
- 5 Click **Save**. The edited contact is saved.

# Web browsing

The browser is optimized to view WML and HTML web pages.

To browse web pages, the following requirements must be met:

- The wireless coverage indicator must show a level of wireless coverage.
- **GPRS** must appear with the wireless coverage indicator on the home screen

## Open a web page by typing a URL

- 1 Open a browser. The startup screen appears.
- 2 Click the trackwheel. A menu appears.
- 3 Click on **Home Page** then click **Get Link**
- 4 The page loads with menu choice, news, entertainment etc.
- 5 Click **Go To**. A dialog box appears.
- 6 Click the **Go To** field, type a URL.

**Tip:** Press the **Space** key to insert a full stop or period (.). Press a **Shift** key + the **Space** key to insert a slash mark (/).

- 7 Click **OK**. The browser requests the web page.

# E-mail

## Send an E-mail

- 1 Open the message application. The messages screen appears.
- 2 Click the trackwheel. A menu appears.
- 3 Click **Compose E-mail**. The Select Address screen appears.
- 4 Click **Use Once**. A menu appears.
- 5 Click **E-mail**. The One Time E-mail screen appears.
- 6 Type an E-mail address.
- 7 Click the trackwheel. A menu appears.
- 8 Click **Continue**

Tip: To add additional contacts to your message, click the trackwheel. Click **Add To**, **Add Cc**, or **Add Bcc**. Repeat steps 2 through 6.

- 9 In the **Subject** field, type a subject.
- 10 Press the **Enter** key.
- 11 Type a message.
- 12 Click the trackwheel. A menu appears.
- 13 Select one of the following:
  - To save a draft of the message without sending it, click **Save Draft**.
  - To send the message, click **Send**.

If you send a message and you are not in an area of sufficient wireless coverage, the handheld sends the message when you return to an area of sufficient coverage.

## Send a message to a contact in your address book

- 1 Open the address book application. The Find screen appears.

Tip: To search for a contact name, type the first letters of the name.

- 2 Click a contact. A menu appears.
- 3 Click **E-mail <contact name>**.
- 4 Then follow points 9 to 13 of 'Send an E-mail' instructions.

## Reply to a message

- 1 Open the messages application. The Messages screen appears.
- 2 Click a message. A menu appears.
- 3 Click **Open**.
- 4 Click the trackwheel. A menu appears.
- 5 Select one of the following options:
  - To reply to only the sender, click **Reply**.
  - To reply to the sender and all recipients of the original message, click **Reply To All**.

Tip: To delete the original message from the reply, click the trackwheel. A menu appears. Click **Delete Original Text**.

- 6 Then follow points 11 to 13 of 'Send an E-mail' instructions.

## Open a file attachment

- 1 In a message with a file attachment, click the trackwheel. A menu appears.
- 2 Click **Open Attachment**. The Attachment screen appears.
- 3 Click **Full Content**. A menu appears.
- 4 Click **Retrieve**. The contents appear.

# Tips

## Handheld

### To

Turn on the handheld  
Turn off the handheld

Turn on / off the radio

Turn on / off backlighting

Lock the handheld

Lock the keyboard

Unlock the keyboard

### Do this

Press the **Power** button

Hold the **Power** button OR  
Click the **Turn Power Off** icon

Click the **Turn Wireless On / Turn Wireless Off** icon

Press the **Power** button

Click the **Lock** icon

Click the **Keyboard Lock** icon

Double-click the trackwheel

## Navigating

### To

Move the cursor

Click an item

Return to the previous screen

Move backward / forward

Select multiple items

Move to the top of the screen

Move to the bottom of the screen

Move to an item in a list or menu

Page up or down in a list

### Do this

Roll the trackwheel OR

Press the **Alt** key + roll the trackwheel

Highlight the item > Click the trackwheel

Press the **Escape** button

Press the **Back / Forward** key

Hold the **Shift** key + roll the trackwheel

Press **T**

Press **B**

Press the first letter of the item

Press the **Alt** key + roll the trackwheel

## Typing text

### To

Capitalise a letter

Insert a full stop or period (.)

Type the alternate character

Insert a special character

Insert a symbol

Enter CAP-lock mode

Enter NUM-lock mode

Exit NUM-lock or CAP-lock mode

### Do this

Hold the letter

Press the **Space** key twice

Press the **Alt** key + the required key

Hold a letter + roll the trackwheel

Press the **Symbol** key > Click a symbol

Press the **Alt** key + the **Right Shift** key

Hold the **Right Shift** key + press the **Alt** key

Press the **Right Shift** key

## Editing text

### To

Enter selection mode

Select text

Select one character

Copy selected text

Paste selected text

Cut selected text

### Do this

Press the **Alt** key + click the trackwheel

Enter selection mode > roll the trackwheel

Enter selection mode > Hold the **Shift** key + roll the trackwheel

Press the **Alt** key + click the trackwheel OR  
Click the trackwheel > click **Copy**

Press the **Shift** key + click the trackwheel OR  
Click the trackwheel > click **Paste**

Press the **Shift** key + the **Backspace** key OR  
Click the trackwheel > click **Cut**

## Miscellaneous

### To

Search for text

Clear a field

Move an icon on the Home screen

### Do this

Click the trackwheel > Click **Find** > Type text

Click the trackwheel > Click **Clear Field**

Press the **Alt** key > Click the trackwheel >  
Click **Move Icon** > Roll the trackwheel >  
Click the trackwheel

# Tips

## Phone

To	Do this
Open the Phone screen	Press <b>Phone</b> button
Dial quickly from the Phone screen	Press <b>Space</b> key
Dial letters	Press <b>Alt</b> key
End a call from the Active Call screen	Press <b>Escape</b> key
Mute a call from the Active Call screen	Press <b>Phone</b> button

## Messages

To	Do this
Compose a message from the Messages screen	Press <b>C</b> key
Page up in an open message	Press <b>Alt</b> key + <b>Enter</b> key
Page down in an open message	<b>Enter</b> key
Reply to sender	Press <b>R</b> key
Reply to all	Press <b>L</b> key
Forward a message	Press <b>F</b> key
Mark a message opened or unopened	Press <b>Alt</b> key + <b>U</b> key
Move to next date	Press <b>N</b> key
Move to previous date	Press <b>P</b> key
Move to next unread message	Press <b>U</b> key
Move to the last cursor position in a received message	Press <b>G</b> key

## Attachments

To	Do this
Select a worksheet	Press <b>V</b> key
Move to next page or worksheet	Press <b>N</b> key
Move to previous page or worksheet	Press <b>P</b> key
Move to a specific cell	Press <b>G</b> key
Display contents of a specific	Press <b>Space</b> key

## Browser

To	Do this
Open the Home page	Press <b>H</b> key
Open the Browser Bookmarks screen	Press <b>K</b> key
Add a bookmark	Press <b>A</b> key
Refresh a web page	Press <b>R</b> key
Page down	Press <b>Space</b> key
Stop a web page from loading	Press <b>Escape</b> button
Move to a specific web page	Press <b>G</b> key

## Calendar\*

To	Do this
Change to Agenda format	Press <b>A</b> key
Change to Day format	Press <b>D</b> key
Change to Week format	Press <b>W</b> key
Change to Month format	Press <b>M</b> key
Move to the next day, week, month	Press <b>N</b> key
Move to the previous day, week, month	Press <b>P</b> key
Move to the current date	Press <b>T</b> key
Move to a specific date	Press <b>G</b> key

\*The Enable Quick Entry field must be set to No for these tips to work in Day format.